

LJ 1

PET Felt Armchair



Colours

Shell



Frame

Standard RAL 9011 (Black) / RAL 9010 (White)
with 30% gloss degree

Custom Any RAL colour as shown at www.devorm.nl
with 70% gloss degree

Upholstered seat*

[Kvadrat collection](#)

Bespoke options

Create a custom design of the LJ 1 armchair at:
www.devorm.nl/products/lj1/configurator

*Upholstered seat is optional

Specifications

Weight

6.8 kg

Seat depth


42 cm

Preassembled

Yes

Packaging


Carton box 65 x 60 x 82 cm
Packed 1 per box

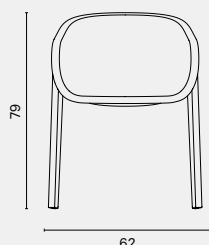

LJ 1 is a universal armchair for commercial interiors. Made from sustainable PET Felt and high-strength steel, this piece of furniture is durable and recyclable after long-time use. Suitable for office, educational and public spaces such as libraries and restaurants. LJ 1 armchair is available in eleven unique PET Felt blends. The design can be further customised with bespoke frame colour and optional seat upholstery.

Designed by **Laurens van Wieringen**

Product overview

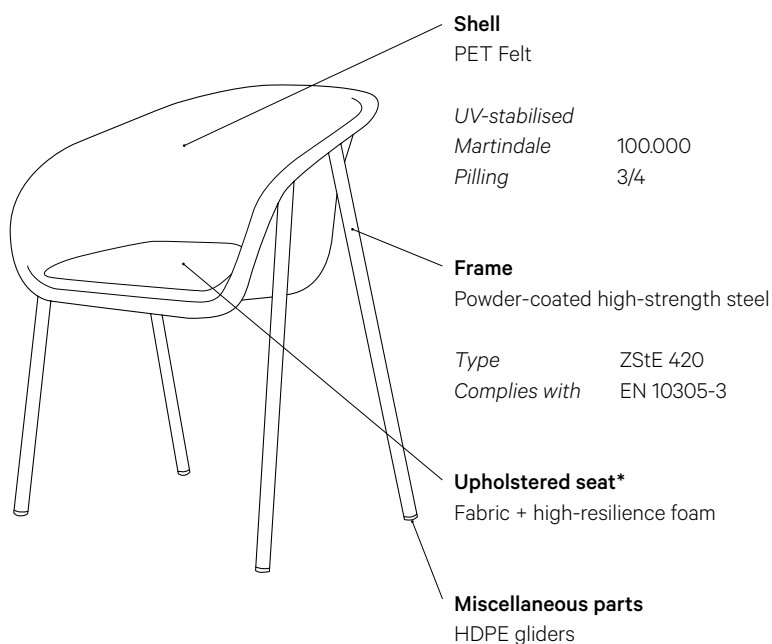

Sustainability goals at De Vorm

We strive to do more with less when creating a comfortable living and working environment. To fulfil this purpose, we are constantly looking for sustainable materials, local suppliers and partners sharing the same values. Ensuring that our products are recycled, durable and recyclable after a long lifespan.

PET Felt technology

PET Felt is made from recycled PET bottles. Cut into smaller flakes, plastic is turned into thin fibres that are intertwined together to form a layer of felt. Further, it is pressed into the shape of a final product with the heat. As a result, PET Felt material is soft to touch and sturdy enough to be used for chair shells and room dividers. PET Felt is UV-stabilised and offers sound-dampening properties due to its open-cellular structure.

Certifications

ANS/BIFMA X5.1 - 2017 Office chairs
EN 15373:2007

Warranty terms

You can find the general warranty terms at:
www.devorm.nl/information-bank/corporate-information/warranty-terms

Care & Maintenance

For Care & Maintenance manual, please, visit our Information Bank:
www.devorm.nl/information-bank/care-n-maintenance